

Lizard Island

GREAT BARRIER REEF



AERODROME FACT SHEET



LOCATION

Lizard Island is located 240km north of Cairns and 27km off the coast of Tropical North Queensland. It is a National Park covering 1,013ha with 24 sandy beaches.

GETTING THERE

Regular flights are available from all Australian capital cities to Lizard Island via Cairns.

East Air operates the connecting flight between Cairns and Lizard Island, which takes around 60 minutes.

Imagine powdery white beaches so pristine, so untouched that yours are the only footsteps in the sand. You'll discover beaches of your dreams on Lizard Island – 24 of them and being right on the Great Barrier Reef you'll find extraordinary snorkelling, diving and more. Outstanding in every aspect, Lizard Island offers an idyllic escape filled with pleasure.

Aerodrome	Lizard Island, Queensland (YLZI)
Category	Unlicensed Aerodrome
Owner / Operator	Lizard Island Pty Ltd PMB 40 Cairns QLD 4871
Location	Latitude 14 40.6°S, Longitude 145 27.2°E, WAC 3112, VAR 7 DEG E
Elevation	70ft AMSL
Runway	12/30 (128 MAG°) 986 x 15m sealed
Runway Strip	986 x 60m
Runway Slope	FM NW END: 1.1% Up for 175m; 0.8% Down for 432m; 1.9% Up for 379m
Lighting	PTBL EMERGY only
Radio Procedures	Communications is with Brisbane Centre 121.2 above 3200ft Contact Lizard Island on 126.70 inbound with ETA and intentions



Parking

The apron area is located on the north eastern side of runway. Overnight parking incurs a parking fee of \$60 (this fee is waived for in-house guests).
Porterage fees apply to non-house guests.

Landing Permits

A landing permit is required. Any permit issued will be for one landing only.
An application should be made 24 hours prior to:
Front Office Manager
Lizard Island
Phone 07 4043 1999
Email lzrreception@delawarenorth.com

Landing Fee

A fee of \$230 (inclusive of GST) is payable for each landing. This fee is waived for guests staying at the resort.
Operational Restrictions & Notices

OPERATIONAL RESTRICTIONS & NOTICES

- The aerodrome and circuit area are subject to severe turbulence in strong wind conditions.
- Overfly aerodrome to assess wind conditions and runway availability prior to joining circuit. Use landing lights in circuit area.
- Right hand circuits when OPR RWY 12.
- Joy flights and flying training are not permitted.
- Operations by aircraft above 5700kg are not permitted.
- All aircraft must use turning nodes for 180 turns on RWY.
- RWY 12/30 transitional SFC infringed by trees on both sides of the RWY.
- Inner HZS infringed by hills to the N of the AD. OBST lights not provided.
- RWY 12 SOT commences at RWS end. ASDA ends at RWS end.
- RWY SOT commences at RWS end. ASDA ends at RWS end.